



Led Neon-Like Open Sign Instructions

INSTALLATION

1. Remove “S” hooks and chains from the parts bag located within the packing.
2. Install the two “S” hooks through the hanger tabs located on the top of the open sign.
3. Attach the chains to the “S” hooks.
4. Attach the two chains to the ceiling using the appropriate hanging hardware.
5. Insert barrel plug into power input and plug adaptor into the electrical outlet.



CONTROL PANEL On back of sign

Flashing Speed Control

Push to change speeds(5 speed options)

Power

Input Volt: 100--240V AC

Hertz:60Hz

Output Amps:1500mA

Output Volts:12V DC



CAUTION

- To reduce the risk of fire, electric shock or injury to persons:
- This product is for indoor use only; Do not use in damp or wet locations.
- Not for use with light dimmer circuits.
- To reduce the likelihood of injury or damage mount only on a surface that is mechanically sound.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- It is recommended to use a surge protector.
- Power surges AER NOT covered under warranty for this product/
- Use 100—240V AC input, 60Hz, 12V DC, 1500mA output adaptor.
- Do not use liquid cleaners or aerosol cleaners; Use a dry cloth for cleaning.
- Do not handle adapter or sign with wet hands.
- Disconnect power before handling or cleaning.
- This product is fully assembled and ready to use. Do not attempt to disassemble or service.
- Do not alter the plug or power supply cord in any way.