


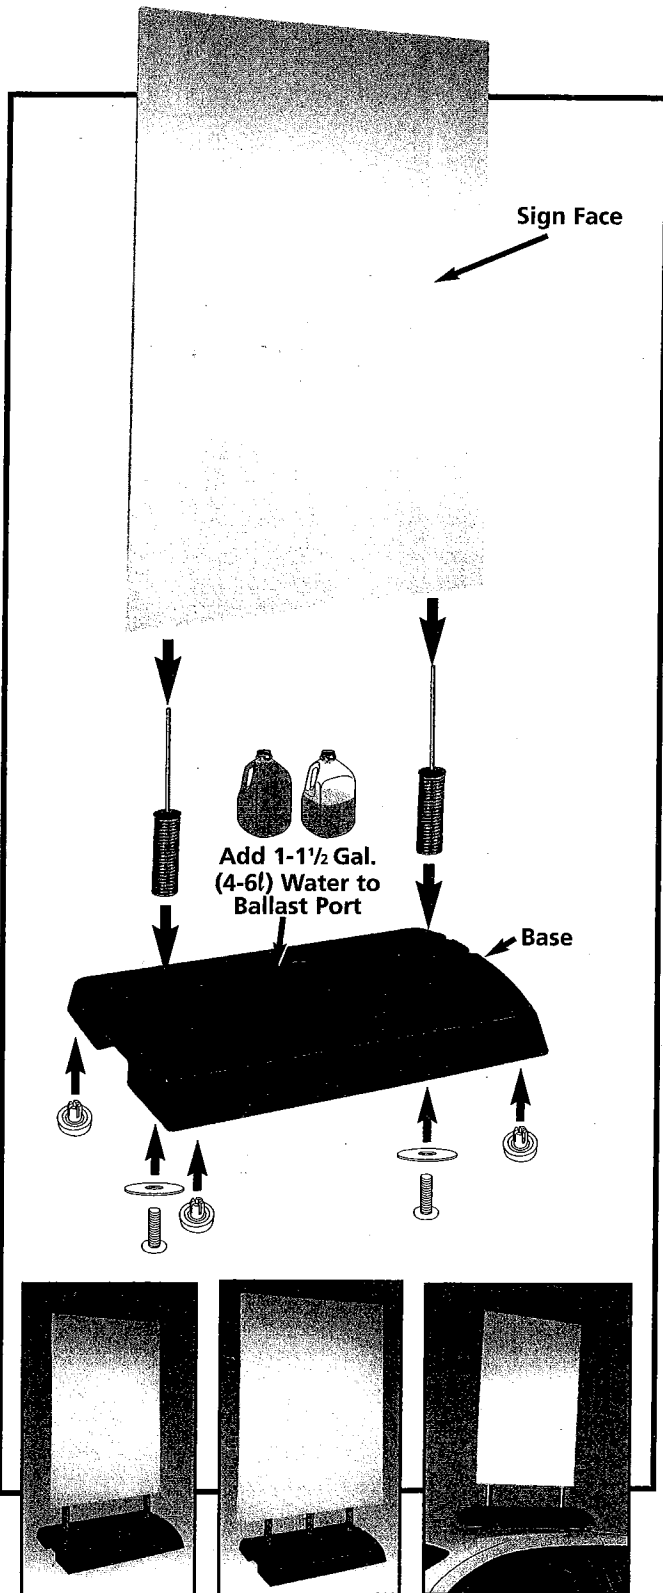

SPRINGER™ SIDEWALK SIGN

 
ASSEMBLY INSTRUCTIONS



Foot (4)



Washer (2)



Truss Head Bolt (2)



Ballast Port Cap



Spring Assembly (2)

Assembly Instructions – Basic Sign

1. Install no-mar anti-slip feet by pushing Feet into holes on bottom of Base and pressing drive pin in completely to lock foot into hole.
2. Attach Spring Assembly to Base using Truss Head Bolt and Washer. Insert Truss Head Bolt with Washer through outer recessed hole in bottom of Base and tighten into Spring Assembly. You may have to apply pressure to the screw when starting.
3. Add 1-1½ gallons (4-6 litres) of water into Ballast Port on top of Base and then insert Ballast Port Cap. The sign will now weigh 18-22 lbs (8-10kg.).
4. Attach decorated Sign Face to Base by inserting rods from Spring Assembly into flutes of the Sign Face. Make sure Sign Face is centered and resting on top of spring.

Magnetic Rooftop Mount

1. Install EZ-Anchors into holes on the bottom of the sign Base and screw flush with bottom using Phillips screwdriver.
2. Attach Magnet to Base using Screw and Washer. Insert Screw through Washer into the bottom of the Magnet and Screw into EZ-Anchor. Leave a loose fit so the Magnets will conform to the shape of the roof.
3. Place completed sign on roof. Sign can be positioned across the car or down the center of the car. Make sure the Magnets are clean and free of sand or grit before placing on roof.
4. To remove sign lift up one side then the other. DO NOT slide or pull sign as this may scratch car.

Helpful Hints

- Decorate Sign Face before attaching to Base. Keep design simple for maximum impact.
- To transport, tip sign on side using handhold and hold from Spring.
- To add more tension between Sign Face and Spring Assembly move rod from Spring Assembly outward 1-2 flutes on Sign Face.
- Springer signs are designed for winds up to 30 mph. In the event of higher winds bring sign inside or add more water through the Ballast Port.

CAUTION!

Springer Signs are designed to be placed on top of parked cars only. DO NOT drive with any part of sign on roof of vehicle. Remove sign from vehicle in high winds.

Basic Sign

Super Size Sign

Magnetic Rooftop Sign