


POSTER RAIL *Secure*



- 1 Flip up one of the end caps and tip the frame on its side to let the grippers slide out.

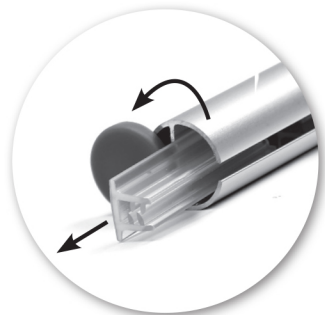

- 2 Attach half of the enclosed grippers to the top of the poster and half to the bottom.



- 3 Slide the poster with the grippers attached back into the channels of the top and bottom frames.



- 4 Flip the end caps closed. Adjust the position of the hangers.

