

CUSTOMER SERVICE - WARRANTY

TECHNICAL SUPPORT

Available 7:30 am - 4:30pm PST

Phone (714) 668-9988

Email: support@pro-lite.com

Web: www.pro-lite.com

WARRANTY

ONE YEAR LIMITED WARRANTY

PRO-LITE, INC. warrants to the original consumer that each of its PRO-LITE products and all components therein contained will be free from defects in materials and/or workmanship for one year from the date of purchase. Any warranty hereunder is extended only to the original consumer purchaser and is not assignable.

In the event of malfunction or other indication of failure attributable directly to faulty workmanship and/or material, PRO-LITE, INC. will at its option, repair or replace said products or components to whatever extent it shall deem necessary to restore said product to proper operating condition, provided the consumer purchaser has previously returned the enclosed Warrants Registration Card to PRO-LITE, INC. Before returning a product for repair, the customer must call PRO-LITE, INC. Customer Service at (714) 668-9988 for a Return Materials Number. This number should be included with the customer's mailing address and telephone number when the product is returned. Products should be returned to: PRO-LITE, INC., Attention: Warranty/Repair, 3505 Cadillac Ave. Bldg. D, Costa Mesa, CA 92626 (postage prepaid). During the year after the date of purchase, all labor and materials will be provided without charge. There shall be no warranty for either parts or labor after the expiration of one year from the date of purchase.

Units must be returned postage prepaid. It is recommended that the unit be insured when shipped. Units returned for which a Warranty Registration Card has not been submitted or out-of-warranty units returned will be repaired or replaced (at the option of PRO-LITE, INC) and the customer will be charged for parts and labor

Products will be returned to customer after repair or replacement has been completed by carrier and method chosen by PRO-LITE, INC. to any destination within the United States of America. Should the customer desire some other specific form of conveyance, or be located outside the border of the U. S. then the customer must bear the cost of return shipment.

The customer shall be solely responsible for failure of any PRO-LITE, INC. product or component thereof, resulting from accident, abuse or misapplication of the product, and PRO-LITE, INC. assumes no liability as a consequence of such events under the terms of the Warranty.

This Warranty gives you specific legal rights and you also have other rights that vary from state to state.


This Warranty is in lieu of all other express warranties, which now or hereafter might otherwise arise with respect to this product. ANY AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR USE SHALL HAVE NO GREATER DURATION THAN THE PERIOD FOR THE EXPRESS WRITTEN WARRANTY APPLICABLE TO THIS PRODUCT AS SHOWN ABOVE AND SHALL TERMINATE AUTOMATICALLY AT THE EXPIRATION OF SUCH PERIOD. No action shall be brought for breach of any implied or express warranty after one year subsequent to the expiration of the period of the express written warranty. (Some states do not allow limitations or how long an implied warranty lasts, so this limitation may not apply to you.)

Incidental and consequential damages caused by malfunctions, defect, or otherwise and with respect to breach of any express or implied warranty, are not the responsibility of PRO-LITE, INC. and to the extent permitted by law are hereby excluded both for property and, to the extent of unconscionable, for personal injury damage. (Some states do not allow the exclusion or limitations of incidental or consequential damages, so the above may not apply to you.)

APPENDIX (continued)

Add Video - Large graphic animations.

Golfing	Female Brunette	Bowing
Crab	Lobster	Girl Opening Gift
Female Singer	Pinata	Doll
Snowman	Medical	Candles & Wreath
Pigs Talking	Santa & Reindeer	Turkey
Girl Riding Tricycle	Santa/Reindeer/Boy	Christmas Tree

 **NOTE:** All graphics and animations may vary from sign to sign.

EFFECTS TABLE

Insertion Effects - The effect used to control how your message will jump on the display.

- 1) Automatic - random effects (*default*)
- 2) Drama - curtain effects
- 3) Scroll - scroll up/down/left/right
- 4) Gathering - merge lines left/right/up/down/diagonal
- 5) Hurricane - rotation effect
- 6) Tornado - twisting effect
- 7) Lens - expands and contracts letters in multiple directions
- 8) To Appear - displays different letters in multiple forms.
- 9) By Color - combines and separates colors individually or in groups.
- 10) Beam - laser beam effects
- 11) Wave - wave effect

Maintaining Effects - The effect used when your message is stationary on the display.

- 1) Drama - curtain effects
- 2) Reverse - inverse color effect
- 3) To Shake - letters/characters shake effect
- 4) Hurricane - rotation effect
- 5) Tornado - twisting effects.
- 6) Lens - expands and contracts letters in multiple directions
- 7) Fruitless - no effect

Display Effects - The effect used to remove your message from the display.

- 1) Drama - random effects (*default*)
- 2) Scroll - scroll up/down/left/right
- 3) Hurricane - rotation effect
- 4) Tornado - twisting effect
- 5) Dividing - closes message using various shapes
- 6) Lens - expands and contracts letters in multiple directions
- 7) Erasing - erase effect
- 8) By Color - combines and separates colors individually or in groups.

APPENDIX

SPECIAL CHARACTERS

Special - Large English and European characters, numbers and symbols.

 
1 2 3 4 5 6 A B C D E F G H I J K L M N O P Q R S T U V X Y Z a b c d e f g h i j
k l m n o p q r s t u v w x y z Á á É é Í í Ó ó Ö ö Ő ő Ú ú Ŭ ŭ Ů ů

Additional symbols not available in this manual.

Move - Animated icons.

Not available in this manual.

Icon - Stationary icons.

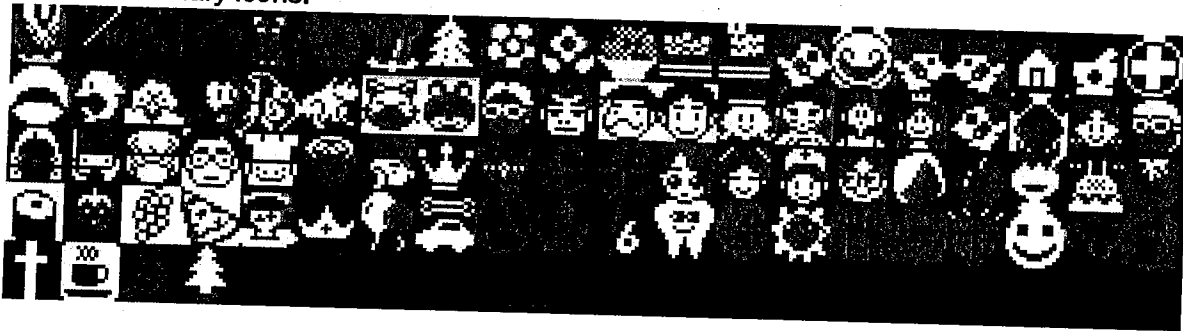

Symbol - Symbols and punctuations.

! " # \$ % & ' () * + , - . / : ; < = > ? @ [\] ^ _ ` { | }

HE-RA - Japanese character set 1.

Not available in this manual.

GA-DA - Japanese character set 2.

Not available in this manual.

Spanish - Spanish character set.

A B C Ch D E F G H I J K L L I M N Ñ O P Q R R R S T U V W X Y Z a b c h d e f
g h i j k l l m n ñ o p q r r r s t u v w x y z ÿ á é í ó ú

F1 - Headline messages.

01: WELCOME TO
02: HAPPY HOUR
03: NIGHTLY ENTERTAINMENT
04: ENTERTAINMENT
05: FOOD SPECIALS
06: DAILY SPECIALS
07: PINTS
08: BOTTLES
09: OPEN 7 DAYS
10: OPEN

11: NFL HEADQUARTERS
12: NASCAR-HAPPY HOLIDAYS
13: NASCAR-HAPPY HOLIDAYS
14: LABOR DAY
15: MEMORIAL DAY
16: HALLOWEEN
17: SUPER BALL
18: PLAYOFFS
19: VISIT NJCOORS.COM OR TEXT #46786
FOR COORS LIGHT HOT SPOTS

ADDITIONAL FEATURES

STOP WATCH AND PASSWORD

Increment Mode – Starts the watch at 00:00:00 and increases the number.

- 1) Press the [MENU] button.
- 2) Press the [▼] arrow button until the Stop Watch option appears.
- 3) Press [OK]. The Increment Mode option appears.
- 4) Press [OK] to select the current option.
- 5) To begin or pause the Stop Watch, press [OK].



TIP: Reset the watch by pressing any arrow button.

- 6) Press [MENU] at any time to exit the Stop Watch option.

Decrement Mode – Starts the watch at 12:59:59 and decreases the number.

- 1) Press the [MENU] button.
- 2) Press the [▼] arrow button until the Stop Watch option appears.
- 3) Press [OK]. The Increment Mode option appears.
- 4) Use the [▼] arrow button to scroll to the Decrement Mode option.
- 5) Press [OK] to select the current option.
- 6) To begin or pause the Stop Watch, press [OK].



TIP: The [▲] and [▼] arrow buttons can be used to set the Stop Watch while the [◀] and [▶] arrow buttons can be used to move the cursor.

- 7) Press [MENU] at any time to exit the Stop Watch option.

Password– Password protect your messages from being changed by another user.

- 1) Press the [MENU] button.
- 2) Press the [▼] arrow button until the Password option appears.
- 3) Press [OK].
- 4) When the Password box appears, use the Character/Number buttons to enter your secret 4 digit PIN number.



NOTE: To cancel Password entry, simply press [ESC] at anytime.



NOTE: WRITE DOWN YOUR PASSWORD FOR SAFE KEEPING!

- 5) Now re-enter your 4 digit PIN number again.
- 6) Press [MENU] to exit the Password option.

CONTENT DELETION

ERASE UNWANTED MESSAGES


Select to delete a single message or all your messages from memory.

Delete Option - Erase a single message.

- 1) Press the [MENU] button.
- 2) Press the [▼] arrow button until the Delete Contents option appears.
- 3) Press [OK].
- 4) The Delete Option will appear.
- 5) Use the [▲] and [▼] arrow buttons to scroll through your existing messages.
- 6) Select the message you would like to delete by pressing [OK].
- 7) The Delete? (OK/ESC) prompt will appear.
- 8) Press [OK] to confirm deletion or [ESC] to cancel deletion.
- 9) The Delete Option will appear. Press [ESC]
- 10) Now press [ESC] again to run your message.

Delete All - Erase all stored messages.

- 1) Press the [MENU] button.
- 2) Press the [▼] arrow button until the Delete Contents option appears.
- 3) Press [OK].
- 4) The Delete Option will appear.
- 5) Press the [▼] arrow button. The Delete All option appears.
- 6) Press [OK].
- 7) The Delete? (OK/ESC) prompt will appear.
- 8) Press [OK] to confirm deletion or [ESC] to cancel deletion.
- 9) The Delete All option will appear. Press [ESC]
- 1) Now press [ESC] again to run your message.

 **NOTE:** ANY MESSAGES DELETED WILL BE PERMANENTLY REMOVED FROM THE DISPLAY MEMORY AND CANNOT BE RECOVERED FOR FUTURE USE.

COUNTER CONTENT *(continued)*

- 7) The Add Contents option appears, press [OK].
- 8) Press [ESC] to run your message.


VISUAL CONTENT (continued)


TIME, DATE

Useful content for the public eye.

Display Date – Change the appearance of the Date with your custom message.

- 1) Press the [MENU] button.
- 2) Press [OK].
- 3) Press the [▼] arrow button until the Display Date option appears.
- 4) Press [OK].
- 5) Use the [◀] and [▶] arrow buttons to select a number.
- 6) Now apply any one or a combination of Font Styles to the numbers.


 **NOTE:** The [ATTRIBUTE] Font Style is not applicable to the Date and Time.

 **NOTE:** The Date cannot be set from this option. Please refer to the TIME/DATE AND TIMER section for Date settings.

- 7) When you are satisfied with your changes, press [OK].
- 8) The Automatic Effect option appears. Choose a preferred effect or press [OK] to continue (refer to the Effects Content section for assistance).
- 9) The Add Contents option appears, press [OK].
- 10) Press [ESC] to run your message.

Display Time – Change the appearance of the Date with your custom message.

- 11) Press the [MENU] button.
- 12) Press [OK].
- 13) Press the [▼] arrow button until the Display Time option appears.
- 14) Press [OK].
- 15) Use the [◀] and [▶] arrow buttons to select a number.
- 16) Now apply any one or a combination of Font Styles to the numbers.

 **NOTE:** The Time cannot be set from this option. Please refer to the TIME/DATE AND TIMER section for Time settings.

- 17) When you are satisfied with your changes, press [OK].
- 18) The Automatic Effect option appears. Choose a preferred effect or press [OK] to continue (refer to the Effects Content section for assistance).
- 19) The Add Contents option appears, press [OK].
- 20) Press [ESC] to run your message.

SPECIAL CHARACTERS CONTENT (continued)

F1 - **Headline messages.**

24) Press [F1].

25) Use the [▲] and [▼] arrow buttons to scroll through all the available Headlines.

26) Press [OK] to insert a Headline.

F2 - **This button has no function at this time.**

F3 - **European characters.**

27) Press [F3].

28) Use the [◀] and [▶] arrow buttons to scroll through all the available characters.

29) Press [OK] to insert a European character.

F4 - **Russian characters.**


30) Press [F4].

31) Use the [◀] and [▶] arrow buttons to scroll through all the available characters.

32) Press [OK] to insert a Russian character.

PRACTICE

33) Go ahead! Enter additional special characters.

 **NOTE:** Refer to the Appendix Section for a list of all Special characters content.

Exit the Edit Mode

34) Press [OK] twice.

Run your Message

35) Press [ESC] to run your message.

EFFECTS CONTENT

APPLY EFFECTS TO YOUR MESSAGE

Now let's customize a new message using the effects that fit your preference.

Enter the Edit Mode


- 1) Press [MENU].
- 2) Press [OK] twice.


Input the phrase "Huge Sale"

- 3) Use the designated Character/Number buttons to input the word "Awesome".
- 4) When your message is complete, press [OK].

Insertion Effect – The effect used to control how your message will jump on the display.

- 14) Use the [▲] or [▼] arrow buttons to scroll through the effects.

 **NOTE:** Press [OK] to preview the effect with your message. Press [ESC] to go back to the effects selection menu.

 **TIP:** When previewing an effect, try using the [▲] or [▼] arrow buttons to see a variation of the selected effect. Also try using the [◀] or [▶] arrow buttons to manipulate the speed of the effect.

- 15) When you are satisfied with your effect preview, press [OK].

Preservation Effect – The effect used when your message is stationary on the display.

- 16) Use the [▲] or [▼] arrow buttons to scroll through the effects.
- 17) When you are satisfied with your effect preview, press [OK].

Hold Time – How long your message will remain on the display before Release Effect.

- 18) Use the [▲] or [▼] arrow buttons to select a number from 01 – 99 (seconds).
- 19) When you are satisfied with your setting, press [OK].

Release Effect – The effect used to remove your message from the display.

- 20) Use the [▲] or [▼] arrow buttons to scroll through the effects.
- 21) When you are satisfied with your effect preview, press [OK].

 **NOTE:** Refer to the Appendix Section for a list of all effects.

Connection – This setting has no function at this time.

- 22) Press [OK].

Run your message

- 23) Press [ESC] to run your message.

FONT STYLES CONTENT

APPLY FONT STYLES TO YOUR MESSAGE

Now that you are familiar with adding new content, let's create a new message and make your fonts come to life!

Enter the Edit Mode

- 1) Press [MENU].
- 2) Press [OK] twice.

Input the word "Awesome"

- 3) Use the designated Character/Number buttons to input the word "Awesome".



TIP: The [ENG] and [eng] buttons can be used to toggle between lowercase and uppercase letters.

- 4) Press the [◀] arrow button once and the cursor will move one space to the left.
- 5) Now continue to use the [◀] arrow button to move the cursor back to the letter "A".



TIP: The [◀] and [▶] arrow buttons can be used to position the cursor anywhere on the display.

Color Style – Changes the font color.

- 6) Press the [COLOR] button once and the font color will change. Now continue to press the [COLOR] button several times to preview all the font colors available. When you are satisfied with your selection, press the [▶] arrow button to move to the next letter.

Width Style – Changes the font size.

- 7) Press the [WIDTH] several times to preview the font sizes available.
- 8) When you are satisfied with your selection, press the [▶] arrow button to move to the next letter.

Attribute Style – Adds a font effect.

- 9) Press the [ATTRIBUTE] button several times to preview the font effects available.
- 10) When you are satisfied with your selection, press the [▶] arrow button to move to the next letter.

Font Style – Changes the font type.


- 11) Press the [FONT] button and the font color will change. Now continue to press the [COLOR] button several times to preview the font styles available.
- 12) When you are satisfied with your selection, press the [▶] arrow button to move to the next letter.

NEW CONTENT

CREATE A SINGLE-LINE MESSAGE

Enter the Edit Mode

- 1) Press the [MENU] button.
- 2) The Add Contents option appears. Press [OK].
- 3) The Add Message option appears. Press [OK].

 **NOTE:** When a momentary prompt appears, simply wait until it disappears from the display before proceeding to press a button. If a button is pressed during a prompt, simply press the designated button again.


- 4) When you see the flashing cursor to the left, you are ready to proceed.

Input the word "HELLO WORLD"


- 5) Press [3 GHI]. The letter "G" appears.
- 6) Press [3 GHI] again. The letter "H" appears.

 **NOTE:** Each Character/Number button supports multiple letters.


- 7) Now press [2 DEF] twice. The letter "E" appears.
- 8) Press [4 JKL] three times. The letter "L" appears.

 **TIP:** Correct mistakes easily by using the [DELETE] button.

- 9) Now press the [▶] arrow button to advance the cursor.

 **NOTE:** If necessary to use the same Character/Number button to display an additional letter, simply press the [▶] arrow button to advance the cursor to the right, then press the designated Character/Number button again.

- 10) Press [4 JKL] three times again. The letter "L" appears.
- 11) Press [5 MNO] three times. The letter "O" appears.
- 12) Press [SPACE] and continue to input the word "WORLD".

 **TIP:** The [FIX] button resizes the word to fit the entire display. Go ahead, try it!

Exit the Edit Mode

- 13) Press [OK].
- 14) The Automatic Effect option appears. Press [OK].
- 15) You are now returned to the Add Contents option.

Run your message

- 16) Finally press [ESC] to run your message.

REMOTE CONTROL

MENU AND SUB-MENU OPTIONS


 
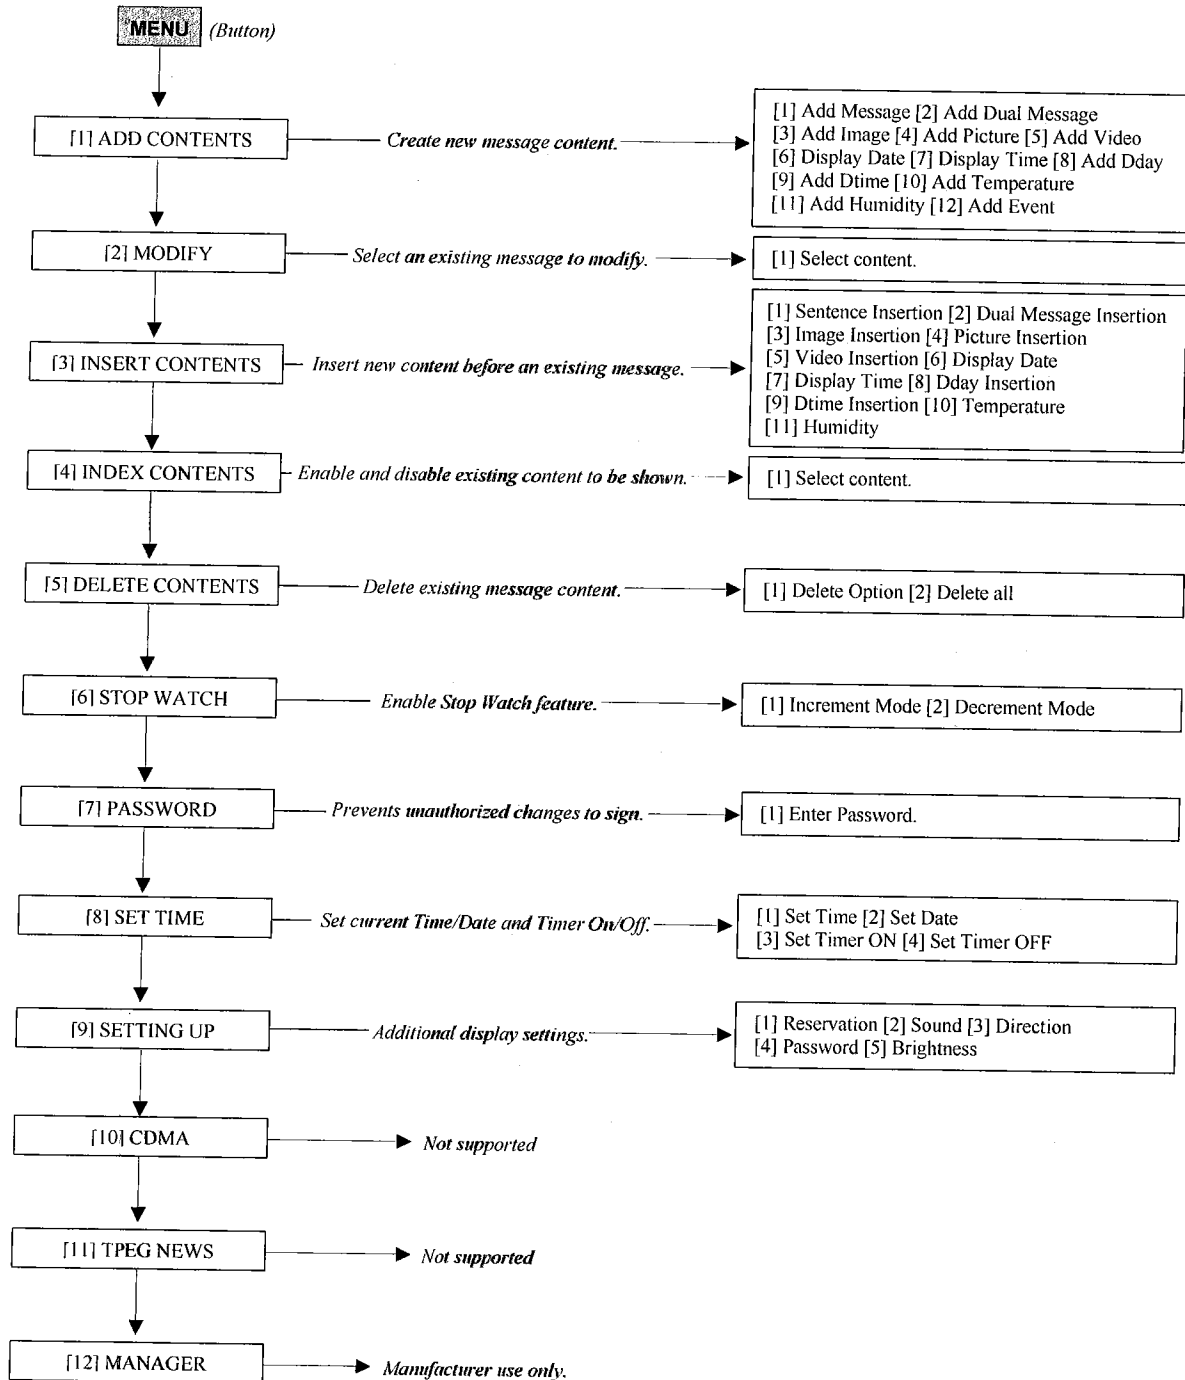 


TABLE OF CONTENTS

REMOTE CONTROL	1
Button Functions & Description	1
Menu and Sub-Menu Options	2
GETTING STARTED	3
How To Use This Manual	3
NEW CONTENT	4
Create A Single-Line Message	4
Create A Double-Line Message	5
FONT STYLES CONTENT	6
Apply Font Styles To Your Message.....	6-7
EFFECTS CONTENT	8
Apply Effects To Your Message	8
SPECIAL CHARACTERS CONTENT	9
Insert Symbols, Icons, And International Characters	9-10
VISUAL CONTENT	11
Graphic Animations	11
Time, Date	12
COUNTER CONTENT	13
Dday, Dtime, And Event	13-14
CONTENT MODIFICATION	15
Modify, Insert, and Index Content	15
CONTENT DELETION	16
Erase Unwanted Messages	16
TIME/DATE AND TIMER	17
Set Current Time, Date And Timer Setting	17
ADDITIONAL FEATURES	18
Stop Watch And Password.....	18
SETTINGS	19
Reservation, Sound, Direction, Password Enable/Disable, Brightness.....	19
APPENDIX	20
Special Characters	20
Graphic Animations	21
Effects Table	22
FAQS - TROUBLESHOOTING	23
Frequently Asked Questions	23
Troubleshooting	23
CUSTOMER SERVICE - WARRANTY	24
Technical Support	24
Warranty	24

IMPORTANT SAFETY INSTRUCTIONS

 READ BEFORE OPERATING DISPLAY

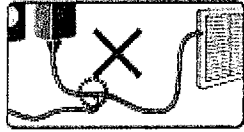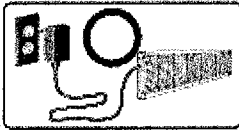

Do not share or split the power cable of the display.
This may cause serious injury and electrical shock.



Do not plug more than two plugs into a single outlet.

Sharing several plugs on a single outlet is a fire hazard and may cause overheating.



Do not bend, twist, or place heavy objects on the power cord.

Excessive binding or twisting may cause the wires inside to short circuit causing a potential fire hazard.



Do not touch outlet or handle power plug with moist or wet hands.

This may cause electrical shock and serious injury.



The power plug must be securely connected to the outlet.

Loose plugs can be hazardous and cause serious injury.



Do not open, modify or disassemble any part of the display.

This will void warranty and may result in electrical shock and serious injury.



If there is any sign of smoke or unusual burning odor from the operation of this display, unplug the unit immediately and contact the Pro-Lite Service Center. Continued operation during smoke or unusual burning odor can be dangerous and result in a fire or serious injury.



Handle with care when transporting or carrying the display.

Dropping the display may cause permanent damage and void warranty.



During installation, properly mount and fastened the display.

Improperly mounted displays can fall causing bodily harm and injury.



Do not allow the sign to swing. Do not install near a magnetic source.

These may cause the display to operate undesirably.



Do not open, modify or disassemble the remote control.

This may cause permanent damage to the remote and void warranty.