

INSTRUCTION SHEET

MATERIAL LIST:

(Using a rubber mallet can make installation easier.)

MODEL NO.: 2456


3pcs - 24" x36" SHELF

2pcs - 24" HANDLE


4pcs - 32" POST

16sets- TAPERED PLASTIC LOCKS

1sets - 4" CASTER (4 W/BREAK)

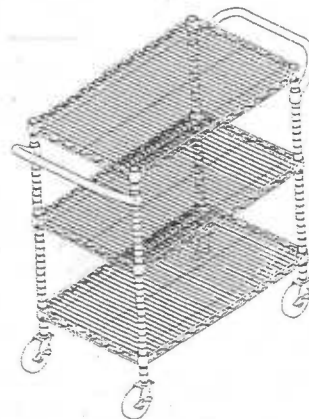

INSTRUCTION:

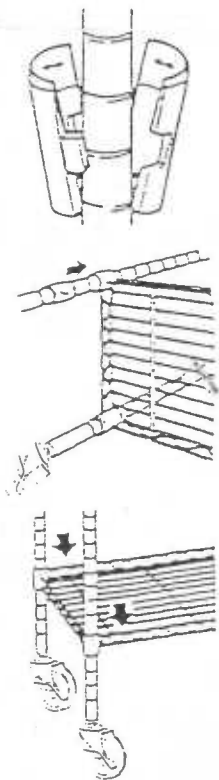

STEP 1 CHOOSE THE DESIRED HEIGHT OF THE BOTTOM SHELF SNAP TAPERED PLASTIC LOCKS INTO THE POST GROOVE WITH THE SMALL TAPERED SIDE OF THE LOCKS FACING UP. THE PLASTIC LOCKS MAY BE ADJUSTED AT 1" INCREMENTS.

STEP 2 HOLD THE SHELF ON ITS SIDE AND SLIDE THE TOP OF THE "U" TYPE POST THROUGH THE BOTTOM OF THE SHELF AT ITS CORNERS UNTIL THERE IS A SNUG FIT.

STEP 3 AFTER SLIDING THE "U" TYPE POST THROUGH THE FIRST SHELF, SET THE UNIT UPRIGHT PUSHING FIRMLY DOWN ON THE SHELF AT THE CORNERS. THIS WILL SECURE THE SHELF OVER THE PLASTIC LOCKS.

STEP 4 SNAP THE PLASTIC LOCKS INTO PLACE ON POSTS AT YOUR NEXT DESIRED SHELF HEIGHT, SLIDE THE SHELF DOWN FROM THE TOP OF THE POST ONTO THE PLASTIC LOCKS.

STEP 5 FLIP THE UNIT ON ITS SIDE AND SCREW IN THE CASTERS.