

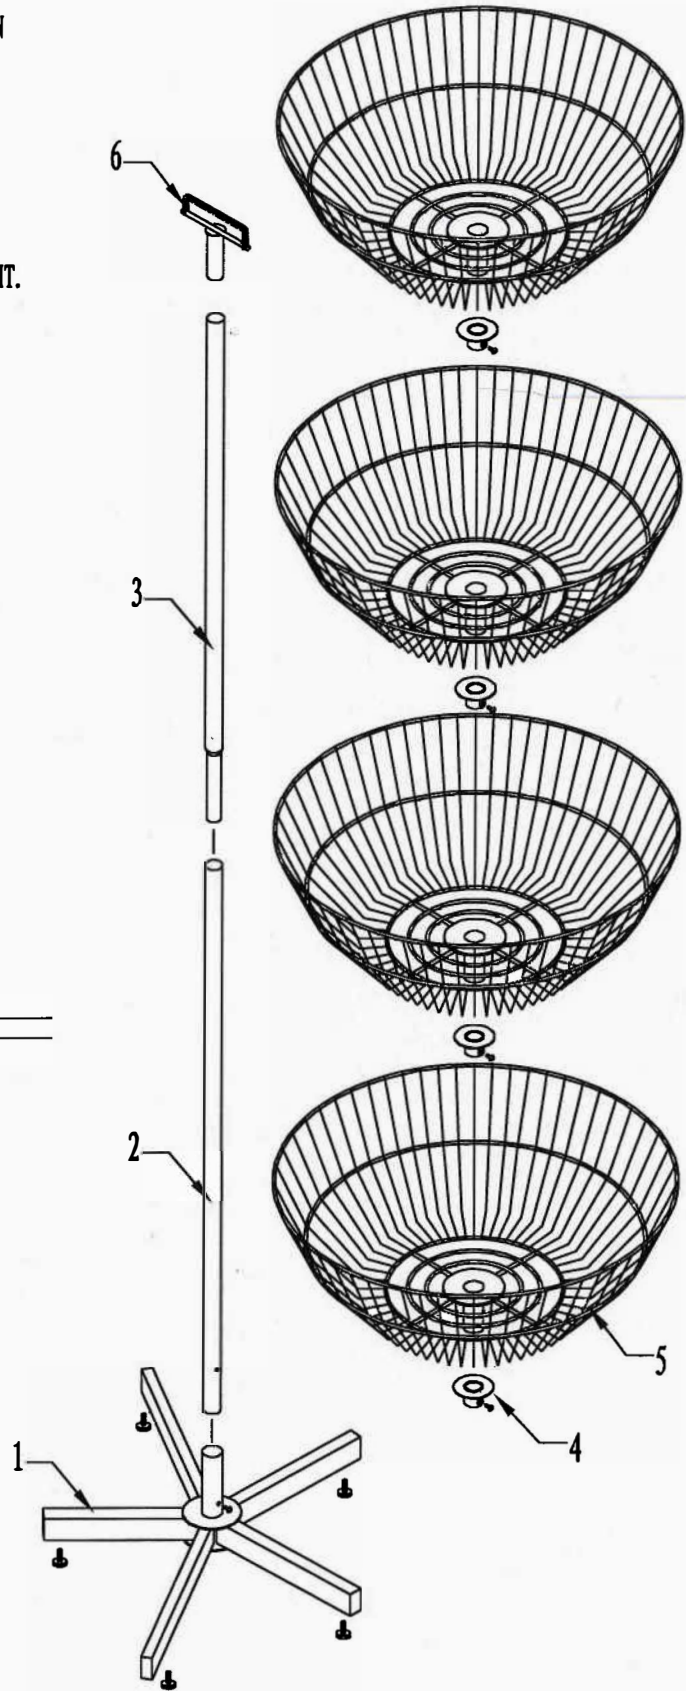


INSTRUCTION STEP

1. PART 1: INSTALL LEVELOR
2. PART 2: INSERT PART 1 TO THE POLE OF THE BASE AND THEN TIGHT WITH SCREW
3. PART 3: INSERT PART 3 TO THE PART 2
4. ASSEMBLY BASEKT:
 - A) PUT PART 4 ON THE POLE AND THEN ONE BASKET,
 - B) SAME WAY FOR ANOTHER 3 OFF PART 4 AND BASKETS
 - C) ADJUST PART 4 TO THE SUIT LOCATION AND THEN SCREW TIGHT.
5. INSERT PART 6 INTO THE TOP OF PART 3



ITEM#3359

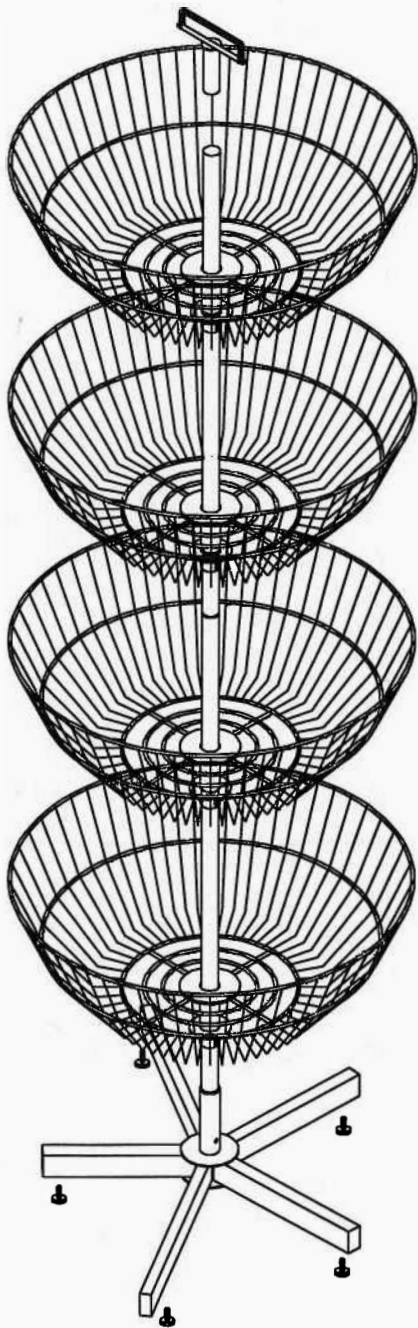