

MATERIAL LIST:(Using a rubber mallet can make installation easier.)

MODEL NO . 1150 / 1151 / 1152 / 1153 / 1154 / 1155

1150-1 / SET / CTN

5 - 18" X 36" SHELFE

4 - 34" BOTTON POST W/ THREADING & FOOT LEVELERS

4 - 40" TOP POST W/ THREADING & PLASTIC END CAPS.

20 - SETS TAPERED PLASTIC LOCKS.

1151-1 / SET / CTN

5 - 18" X 48" SHELFE

4 - 34"BOTTON POST W/ THREADING & FOOT LEVELERS

4 - 40" TOP POST W/ THREADING & PLASTIC END CAPS.

20 - SETS TAPERED PLASTIC LOCKS.

1152-1152B(2 SHELVES + 4 SETS OF POST)+1152A(3 SHELVES)

5 - 18" X 60" SHELFE

4 - 34" BOTTON POST W/ THREADING & FOOT LEVELERS

4 - 40" TOP POST W/ THREADING & PLASTIC END CAPS.

20 - SETS TAPERED PLASTIC LOCKS.

1153-1 / SET / CTN

5 - 24" X 36" SHELFE

4 - 34" BOTTON POST W/ THREADING & FOOT LEVELERS

4 - 40" TOP POST W/ THREADING & PLASTIC END CAPS.

20 - SETS TAPERED PLASTIC LOCKS.

1154-1 /SET / CTN

5 - 24" X 48" SHELFE

4 - 34" BOTTON POST W/ THREADING & FOOT LEVELERS

4 - 40" TOP POST W/ THREADING & PLASTIC END CAPS.

20 - SETS TAPERED PLASTIC LOCKS.

1155-1155B(2 SHELVES + 4 SETS OF POST) + 1155A(3 SHELVES)

5 - 24" X 60" SHELFE


4 - 34" BOTTON POST W/ THREADING & FOOT LEVELERS

4 - 40" TOP POST W/ THREADING & PLASTIC END CAPS.


20 - SETS TAPERED PLASTIC LOCKS.

INSTRUCTION SHEET


STEP 1 ALL FOUR POSTS ARE IN TWO SECTIONS. YOU MUST SCREW POSTS TOGETHER USING THE PRE-INSERTED THREADED POST JOINER. (THE TOP POST SECTION HAS A PLASTIC END CAP ON THE END.)

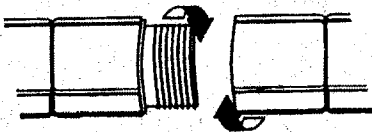


STEP 2 SCREW THE POST SECTIONS TOGETHER UNTIL THERE IS HAND TIGHT FIT. IF THE POSTS DO NOT SCREW TOGETHER EASILY, THE THREADS ARE NOT PROPERLY LINED UP. IN THIS CASE, UNSCREW AND START OVER

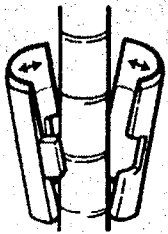

STEP 3 CHOOSE THE DESIRED HEIGHT OF THE BOTTOM SHELF SNAP TAPERED PLASTIC LOCKS INTO THE POST GROOVE WITH THE SMALL TAPERED SIDE OF THE LOCKS FACING UP. THE PLASTIC LOCKS MAY BE ADJUSTED AT 1" INCREMENTS. "IT IS RECOMMENDED THAT THE BOTTOM SHELF IS NO MORE THAN 6" FROM THE FLOOR"

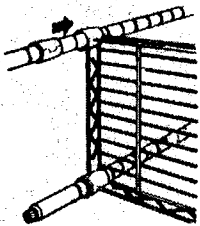

STEP 4 HOLD THE SHELF ON ITS SLIDE AND SLIDE THE TOP OF THE "U" TYPE POST THROUGH THE BOTTOM OF THE SHELF AT ITS CORNERS UNTIL THERE IS A SNUG FIT.

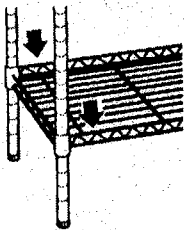

STEP 5 AFTER SLIDING THE POST THROUGH THE FIRST SHELF, SET THE UNIT UPRIGHT PUSHING FIRMLY DOWN ON THE SHELF AT THE CORNERS. THIS WILL SECURE THE SHELF OVER THE PLASTIC LOCKS.


STEP 6 SNAP THE PLASTIC LOCKS INTO PLACE ON POSTS AT YOUR NEXT DESIRED SHELF HEIGHT, SLIDE THE SHELF DOWN FROM THE TOP OF THE POST ONTO THE PLASTIC LOCKS AND REPEAT STEP 5, FOR THE REMAINING SHELVES. "IT IS RECOMMENDED THAT THE TOP SHELF BE SET AT THE TOP OF POST."

INSTRUCTION SHEET


STEP 1 ALL FOUR POSTS ARE IN TWO SECTIONS. YOU MUST SCREW POSTS TOGETHER USING THE PRE-INSERTED THREADED POST JOINER. (THE TOP POST SECTION HAS A PLASTIC END CAP ON THE END.)



STEP 2 SCREW THE POST SECTIONS TOGETHER UNTIL THERE IS HAND TIGHT FIT. IF THE POSTS DO NOT SCREW TOGETHER EASILY, THE THREADS ARE NOT PROPERLY LINED UP. IN THIS CASE, UNSCREW AND START OVER

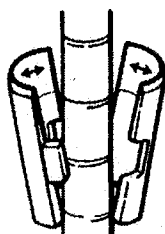


STEP 3 CHOOSE THE DESIRED HEIGHT OF THE BOTTOM SHELF SNAP TAPERED PLASTIC LOCKS INTO THE POST GROOVE WITH THE SMALL TAPERED SIDE OF THE LOCKS FACING UP. THE PLASTIC LOCKS MAY BE ADJUSTED AT 1" INCREMENTS. "IT IS RECOMMENDED THAT THE BOTTOM SHELF IS NO MORE THAN 6" FROM THE FLOOR"

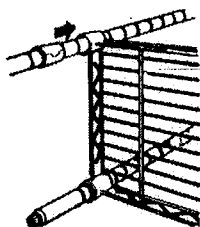

STEP 4 HOLD THE SHELF ON ITS SLIDE AND SLIDE THE TOP OF THE "U" TYPE POST THROUGH THE BOTTOM OF THE SHELF AT ITS CORNERS UNTIL THERE IS A SNUG FIT.

STEP 5 AFTER SLIDING THE POST THROUGH THE FIRST SHELF, SET THE UNIT UPRIGHT PUSHING FIRMLY DOWN ON THE SHELF AT THE CORNERS. THIS WILL SECURE THE SHELF OVER THE PLASTIC LOCKS.

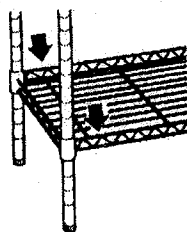

STEP 6 SNAP THE PLASTIC LOCKS INTO PLACE ON POSTS AT YOUR NEXT DESIRED SHELF HEIGHT, SLIDE THE SHELF DOWN FROM THE TOP OF THE POST ONTO THE PLASTIC LOCKS AND REPEAT STEP 5, FOR THE REMAINING SHELVES. "IT IS RECOMMENDED THAT THE TOP SHELF BE SET AT THE TOP OF POST."