




SPECIALTY STORE SERVICES

454 Jarvis Ave. Des Plaines, IL 60018
 PH: (800) 999-0771 | FX: (888) 368-8001
www.specialtystoreservices.com

2293BK With 2292BK INSTRUCTIONS

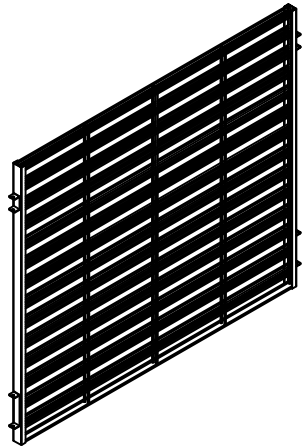

A, 1PCS



B, 2PCS



C, 2PCS



D, 4PCS




E, 1PCS



F, 2PCS

G, 2PCS



H, 2PCS




I, 2PCS



J, 4PCS



K, 1PC

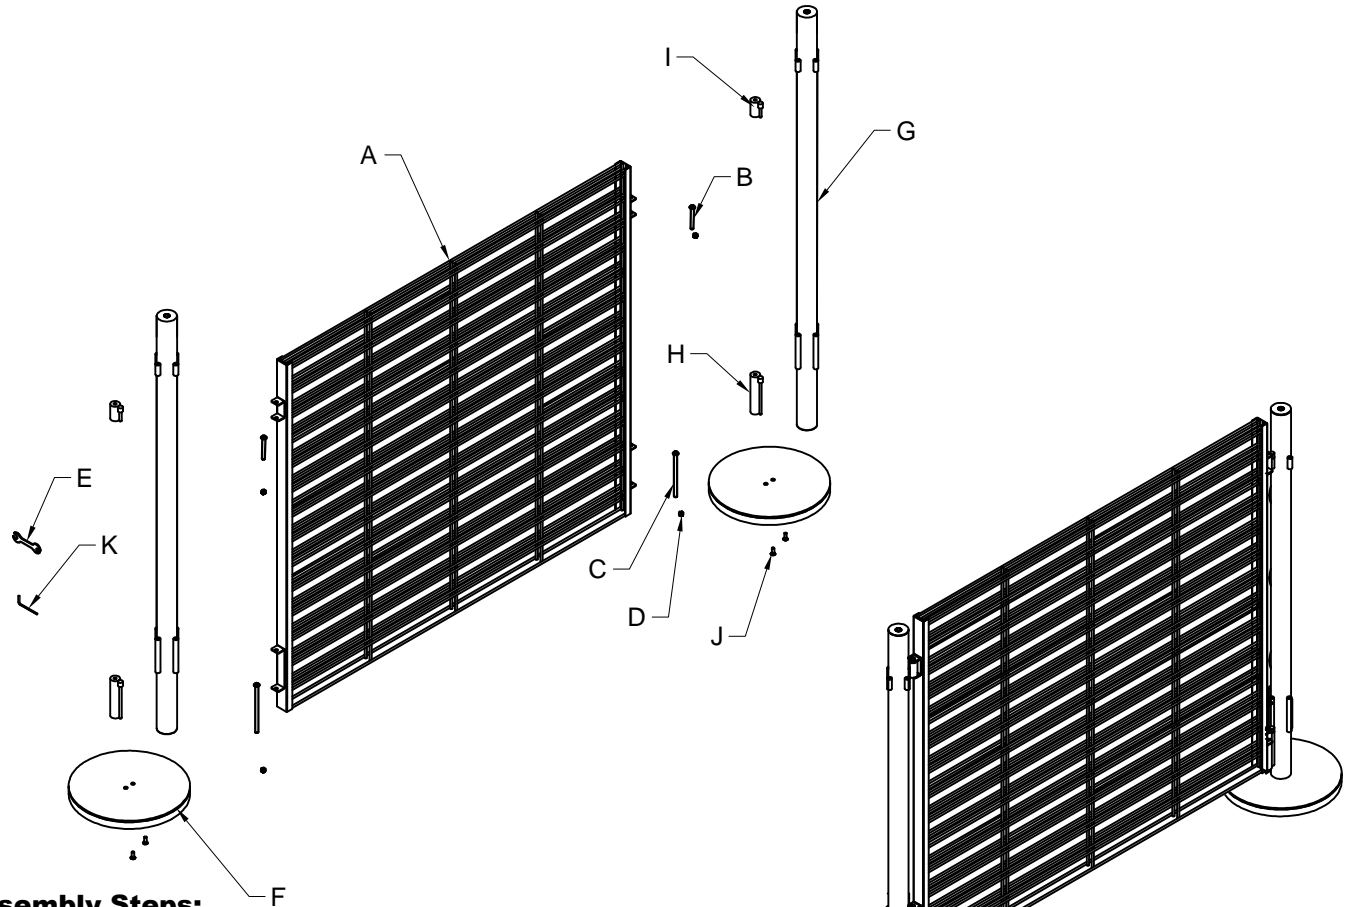

Assembly Steps:

1. Put the upright (part G) to the base part F, tighten with the screws (part J) by wrench part K;
2. Attached slatgrid frame(part A) to the upright, the brackets on the frame snap into place (the hole pins on the upright), line up the holes; And then installed the bolts (part B on top & C on bottom), lock the nuts (part D) to the bolts by wrechtes (part E & K).