


#9886 Double Folding Gate Installation Instructions

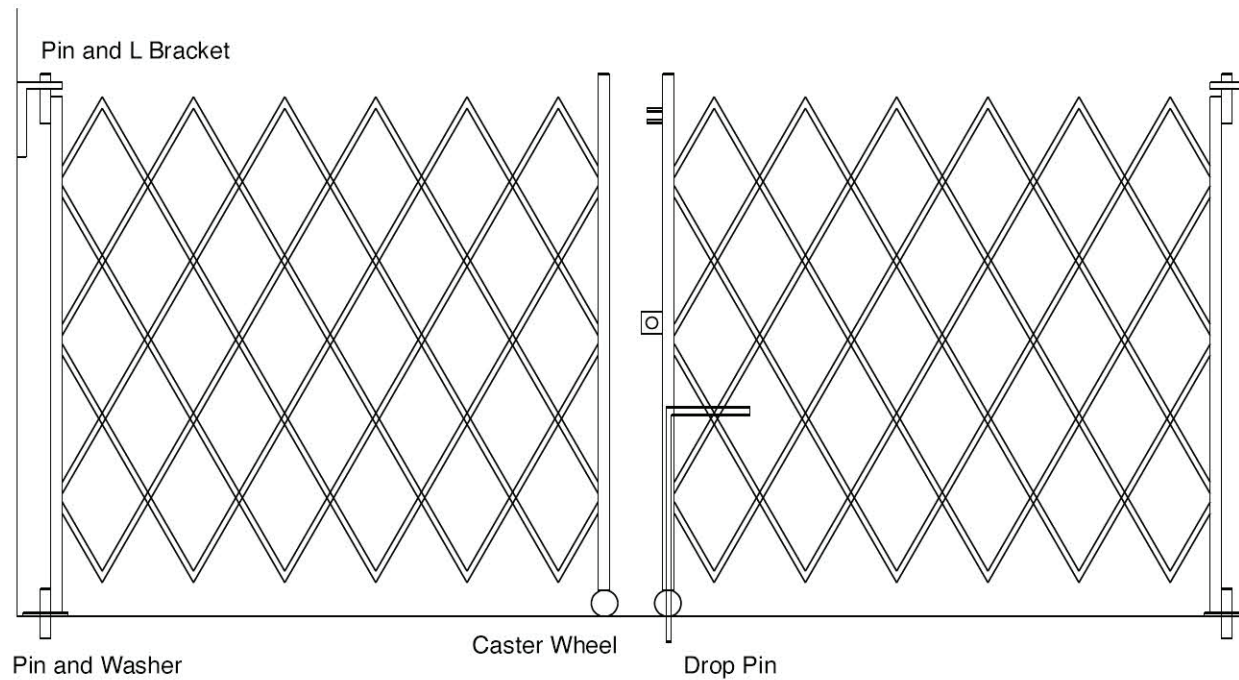

- 1) Mark center of hole 2" from wall for 5/8" pin at bottom of gate
- 2) Drill 3/4" dia hole and place 5/8" washer over hole
- 3) Insert bottom pin of gate in washer and drilled hole
- 4) Install L Brackets to wall:
 - WOOD: Use 5/16" x 2" lag bolts
 - STEEL: Drill and tap for 5/16" x 2" bolts
 - BRICK OR CONCRETE: Use 5/16" x 2" lag bolts
in 3/8" holes with lead anchors
- 5) Repeat steps 1 thru 4 for other side of gate
- 6) Stretch gates to center and drill 3/4" hole for drop pin