


SlatStrip Clothing Kits

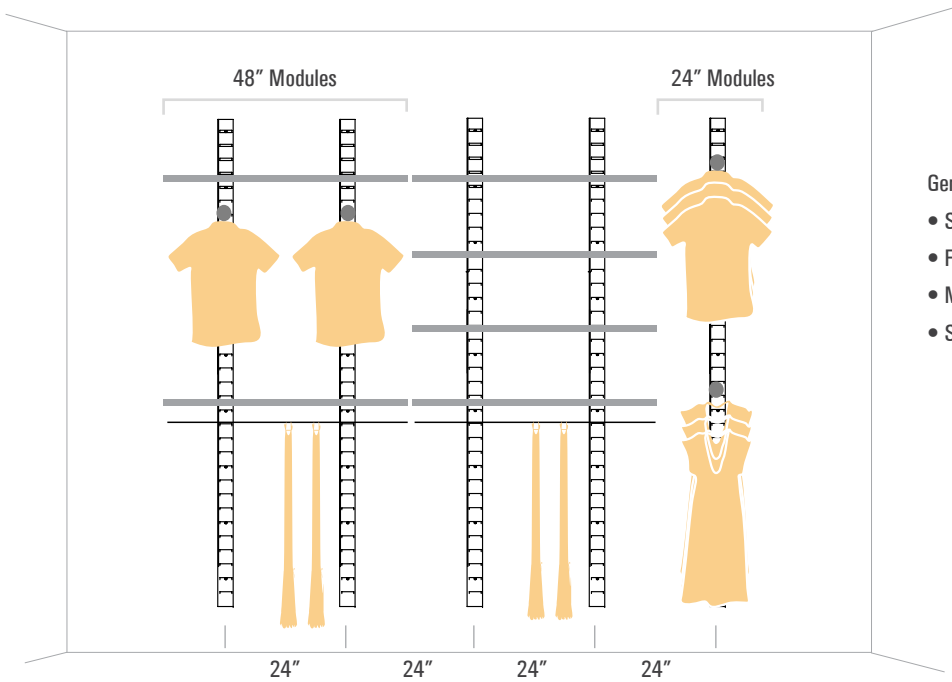


General Features:

- Shelving & hanging modules
- For 48" wood shelves only
- Module height: 91"
- Strips to be installed 24" apart


Recommended Hardware



Phillips Screw Driver

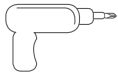

Level

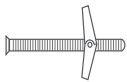

Toggle Bolts



Molly Bolts

Please Note:

For mounting on sheet rock / drywall, we recommend using 3/16" Molly Bolts or Toggle Bolts.

Tools and mounting hardware are not provided




- Material: steel w/ silver frost finish
- Product dimensions: 91" H x 2 3/4" W x 3/4" D
- Slit width: 2"
- Distance between slits: 2 3/4"
- No. of slits 32

Maximum Weight Load (lbs)

Based on a 24" distance between supports

48" MDF Shelf (Thickness 3/4")	44lbs
48" Hangrail (Diameter 3/4")	66lbs
Per 91" Strip	520 lbs

- The maximum weight load is based on an evenly distributed weight load between 2 points
- The maximum weight load for regular glass is approximately 1/4 of tempered glass

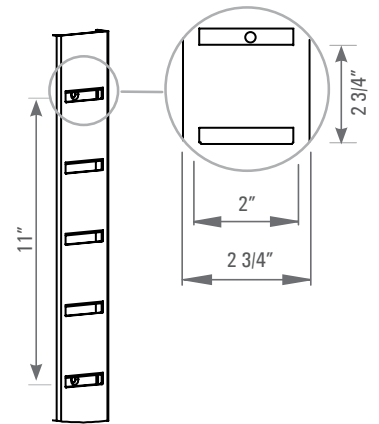



SlatStrip Clothing Kits

Wall Preparation and Installation

1 Mark the SlatStrip connection points on the wall:


Mark the SlatStrip connection points on the wall:

- The distance between points should be 24"
- The points are from the center of each strip
- The strips should be installed 8" above the floor
- Allow 12" from wall edge to strip edge
- Use a level to ensure accurate vertical positioning

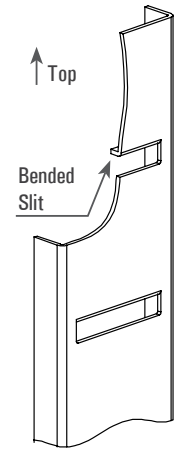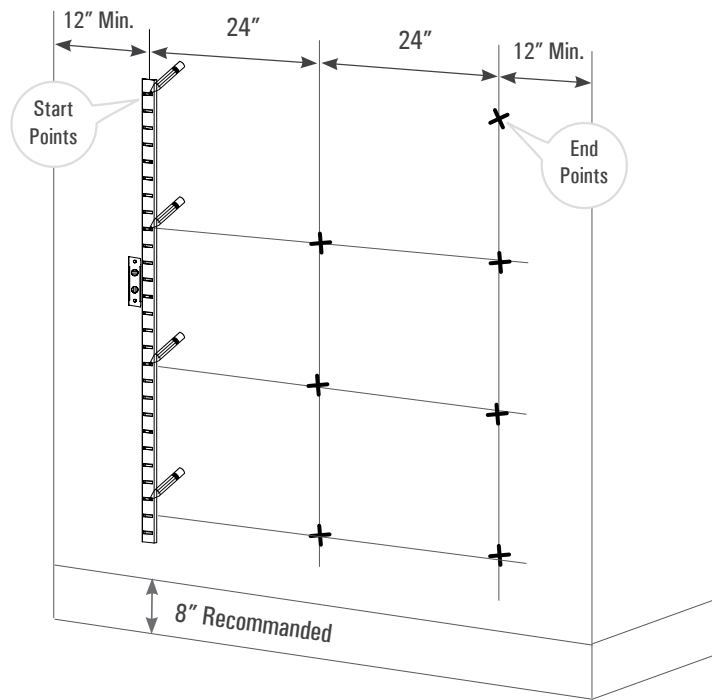


Ensure that the bend in the slit faces upwards


2 Drill holes and apply anchors. Use appropriate fastening hardware for the wall type

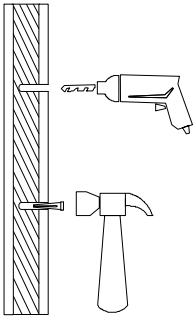


3 Mount strip to the wall using screws with a maximum of 11/32" head diameter

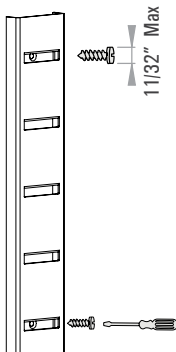


4 Install the rest of the strips as marked in Step 1. Ensure that slits of all strips are parallel to one another

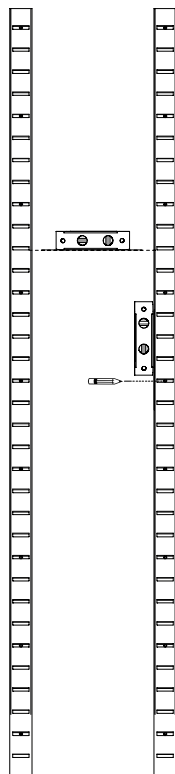

5 Allow 1/2" from the SlatStrip to shelf, in order to be able to change the shelf location as needed

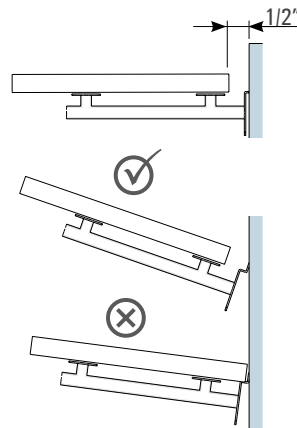

6 Secure wood shelf to shelf bracket with 4 screws

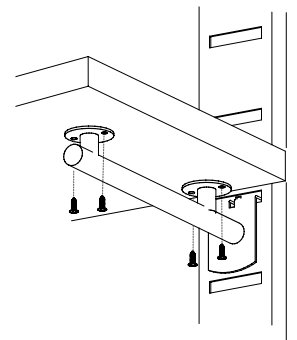

Recommended wood screws, round head, #8 x 5/8"

7 Unscrew the stopper, insert the hangrail into the bracket.

Tighten with Allen Key to lock in place, then screw stopper back into place.

